

## Jim's RV Center

Basic Maintenance Guidelines. Make sure to refer to your specific RV's owner's manual for exact and detailed maintenance items and schedules. This is necessary to keep your warranty in effect.

<b>Frame and Chassis</b>	Pre-Trip	Monthly	3 Months	6 Months	12 Months	As-Needed	By MFG Specs
<b>Frame and Bumber</b>							
Inspect			x				
Rinse						x	
Sand and Paint						x	
<b>Steps</b>							
Clean and lubricate	x	x					
Sand and Paint						x	
<b>Hitch and Coupler</b>							
Inspect and lubricate	x	x					
<b>Safety Chains</b>							
Inspect	x						
<b>Jacks</b>							
Inspect and test	x						
Lubricate				x		x	
<b>Engine Fluids</b>							
Engine oil check	x						
Engine oil change							x
Coolant check	x						
Coolant change							x
Transmission fluid check	x						
Transmission fluid change							x

<b>Suspension</b>	Pre-Trip	Monthly	3 Months	6 Months	12 Months	As-Needed	By MFG Specs
<b>Tires and Wheels</b>							
Inspect and check pressure	x						
Check lug nut torque	x						
<b>Wheel Bearings</b>							
Inspect and repack				x			
<b>Brakes</b>							
Inspect					x		
Adjust					x		

<b>Electrical</b>	Pre-Trip	Monthly	3 Months	6 Months	12 Months	As-Needed	By MFG Specs
<b>Battery</b>							
Inspect	x	x					
Check electrolyte	x	x					
Clean and coat connections					x		
<b>Fuses</b>							
Inspect					x		
Replace						x	
<b>Chassis Lighting</b>							
Check	x						

<b>Exterior</b>	Pre-Trip	Monthly	3 Months	6 Months	12 Months	As-Needed	By MFG Specs
<b>Fiberglass/Metal</b>							
Wash		x					
Wax				x		x	
<b>Plastic/molded parts</b>							
Wash		x					
<b>Rubber Roof</b>							
Inspect for damage/voids			x				
Wash (with approved detergent)					x		
Reseal vents/seams/accessory areas					x	x	
<b>Other Seals and adhesives</b>							
Inspect		x					
Reseal/repair					x		
<b>Windows</b>							
Inspect				x			
Clean weep holes		x					
Replace Sealant						x	
Repair leaks						x	

<b>LP System</b>	Pre-Trip	Monthly	3 Months	6 Months	12 Months	As-Needed	By MFG Specs
<b>System Pressure Check</b>							
Check and adjust regulator to 11" WC					x		
<b>Lines and Fittings</b>							
Drop pressure test for leaks				x			
Inspect lines and fittings					x		
<b>LP Regulator</b>							
Inspect and clear vent screen	x						
<b>LP Bottle/Tanks</b>							
Secure LP tanks	x						
Inspect	x				x		

<b>Water System</b>	Pre-Trip	Monthly	3 Months	6 Months	12 Months	As-Needed	By MFG Specs
<b>Lines and fittings</b>							
Inspect and tighten	x					x	
Inspect city water check valve	x						
Winterize						x	
Sanitize			x			x	
<b>Waste tanks and valves</b>							
Inspect for leaks	x						
Inspect gate valves	x						
Flush				x			
Clean monitor probes					x		
Lubricate gate valves				x			
<b>Water heater</b>							
Inspect burner and combustion	x						
Adjust burner for air mixture					x		
Test pressure relief valve	x						
Inspect/replace anode rod					x	x	

<b>Appliance/Accessories</b>	Pre-Trip	Monthly	3 Months	6 Months	12 Months	As-Needed	By MFG Specs
<b>Refrigerator</b>							
Inspect/clean vents	x						
Inspect/clean burner		x					
Inspect door seal	x						x
MFG's Maint. Instructions							
<b>Furnace</b>							
Inspect and clean burner assy.					x		
MFG's Maint. Instructions							x
<b>Stove/Oven</b>							
Inspect/clean burners	x						
MFG's Maint. Instructions							x
<b>Air Conditioners</b>							
MFG's Maint. Instructions							x
Clean filters			x				
<b>Awning</b>							
Inspect moving parts	x						
Lubricate moving parts					x		
Clean Fabric			x				
<b>Leveling Jacks</b>							
Inspect	x						
Lubricate			x				
MFG's Maint. Instructions							x
<b>Generator</b>							
Check oil	x						
Exercise		x					
MFG's Maint. Instructions							x